



# UG Series Ice Machine

## Installation, Operation and Maintenance Manual

This manual is updated as new information and models are released. Visit our website for the latest manual.



Original Document



**Caution**

Read this instruction before operating this equipment.

## Safety Notices

As you work on Manitowoc equipment, be sure to pay close attention to the safety notices in this manual. Disregarding the notices may lead to serious injury and/or damage to the equipment.

Throughout this manual, you will see the following types of safety notices:

### **Warning**

Text in a Warning box alerts you to a potential personal injury situation. Be sure to read the Warning statement before proceeding, and work carefully.

### **Caution**

Text in a Caution box alerts you to a situation in which you could damage the equipment. Be sure to read the Caution statement before proceeding, and work carefully.

## Procedural Notices

As you work on Manitowoc equipment, be sure to read the procedural notices in this manual. These notices supply helpful information which may assist you as you work.

Throughout this manual, you will see the following types of procedural notices:

### **Important**

Text in an Important box provides you with information that may help you perform a procedure more efficiently. Disregarding this information will not cause damage or injury, but it may slow you down as you work.

**NOTE:** Text set off as a Note provides you with simple, but useful, extra information about the procedure you are performing.

## Read These Before Proceeding:

### **Caution**

Proper installation, care and maintenance are essential for maximum performance and trouble-free operation of your Manitowoc equipment. Read and understand this manual. It contains valuable care and maintenance information. If you encounter problems not covered by this manual, do not proceed, contact Manitowoc Foodservice Group. We will be happy to provide assistance.

### **Important**

Routine adjustments and maintenance procedures outlined in this manual are not covered by the warranty.

### **Warning**

#### **PERSONAL INJURY POTENTIAL**

Do not operate equipment that has been misused, abused, neglected, damaged, or altered/modified from that of original manufactured specifications.

### **Warning**

These products are hermetically sealed and contain fluorinated greenhouse gas R404A.

### **Warning**

These products are hermetically sealed and contain fluorinated greenhouse gas R134A.

**NOTE: SAVE THESE INSTRUCTIONS.**

# Table of Contents

---

## Section 1

### General Information

|                                               |            |
|-----------------------------------------------|------------|
| <b>General</b> .....                          | <b>1-1</b> |
| <b>Model Numbers</b> .....                    | <b>1-1</b> |
| <b>Model Number Identification:</b> .....     | <b>1-1</b> |
| <b>Model/Serial Number Location</b> .....     | <b>1-2</b> |
| <b>Owner Warranty Registration Card</b> ..... | <b>1-3</b> |
| General .....                                 | 1-3        |
| Commercial Warranty Coverage .....            | 1-3        |

## Section 2

### Installation Instructions

|                                                      |            |
|------------------------------------------------------|------------|
| <b>General</b> .....                                 | <b>2-1</b> |
| <b>Ice Machine Dimensions</b> .....                  | <b>2-1</b> |
| <b>Location of Ice Machine</b> .....                 | <b>2-2</b> |
| <b>Leveling the Ice Machine</b> .....                | <b>2-2</b> |
| <b>Electrical Service</b> .....                      | <b>2-3</b> |
| Voltage .....                                        | 2-3        |
| Fuse/Circuit Breaker .....                           | 2-3        |
| Total Circuit Ampacity .....                         | 2-3        |
| <b>Water Service/Drains</b> .....                    | <b>2-4</b> |
| Water Supply .....                                   | 2-4        |
| Water Inlet Lines .....                              | 2-4        |
| Drain Connections .....                              | 2-4        |
| Water Supply and Drain Line Sizing/Connections ..... | 2-4        |
| <b>Installation Checklist</b> .....                  | <b>2-6</b> |
| <b>Before Starting the Ice Machine</b> .....         | <b>2-6</b> |

## Table of Contents (continued)

---

### Section 3 Operation

|                                               |            |
|-----------------------------------------------|------------|
| <b>Component Identification</b> .....         | <b>3-1</b> |
| <b>Component Removal</b> .....                | <b>3-2</b> |
| Top Cover .....                               | 3-2        |
| Bin Door.....                                 | 3-2        |
| Water Curtain.....                            | 3-3        |
| Ice Chute .....                               | 3-3        |
| Spray Bar.....                                | 3-4        |
| Sump Drain Overflow Tube .....                | 3-4        |
| <b>Ice Making Sequence of Operation</b> ..... | <b>3-5</b> |
| Initial Start-Up .....                        | 3-5        |
| <b>Operational Checks</b> .....               | <b>3-6</b> |
| General.....                                  | 3-6        |
| Ice Cube Thickness Check.....                 | 3-6        |
| Cube Shape.....                               | 3-6        |

### Section 4 Maintenance

|                                                         |            |
|---------------------------------------------------------|------------|
| <b>General</b> .....                                    | <b>4-1</b> |
| <b>Cleaning the Condenser</b> .....                     | <b>4-2</b> |
| Air-cooled Condenser .....                              | 4-2        |
| Water-cooled Condenser and Water Regulating Valve ..... | 4-2        |
| <b>Interior Cleaning and Sanitizing</b> .....           | <b>4-3</b> |
| General.....                                            | 4-3        |
| Cleaning & Sanitizing Procedure.....                    | 4-3        |
| <b>Exterior Cleaning</b> .....                          | <b>4-4</b> |
| <b>Removal from Service/Winterization</b> .....         | <b>4-4</b> |
| General.....                                            | 4-4        |
| Air-cooled Ice Machines .....                           | 4-4        |
| Water-cooled Ice Machines .....                         | 4-4        |

### Section 5 Before Calling for Service

|                        |            |
|------------------------|------------|
| <b>Checklist</b> ..... | <b>5-1</b> |
|------------------------|------------|

# Section 1

## General Information

### General

It is recommended that this ice machine be inspected and installed by a qualified service technician.

#### **⚠ Warning**

If you do not understand the procedures or the safety precautions that must be followed, call your local service representative to perform the necessary installation procedures for you.

Follow all recommendations and instructions for proper installation and safe operation of this ice machine.

#### **⚠ Warning**

#### **PERSONAL INJURY POTENTIAL**


Do not operate equipment that has been misused, abused, neglected, damaged, or altered/modified from that of original manufactured specifications.

### Model Numbers

This manual covers the following models:

| Self-Contained Air-Cooled | Self-Contained Water-Cooled |
|---------------------------|-----------------------------|
| UG018A                    | N/A                         |
| UG020A                    | N/A                         |
| UG030A                    | UG030W                      |
| UG040A                    | N/A                         |
| UG050A                    | UG050W                      |
| UG065A                    | N/A                         |
| UG080A                    | N/A                         |


### Model Number Identification:

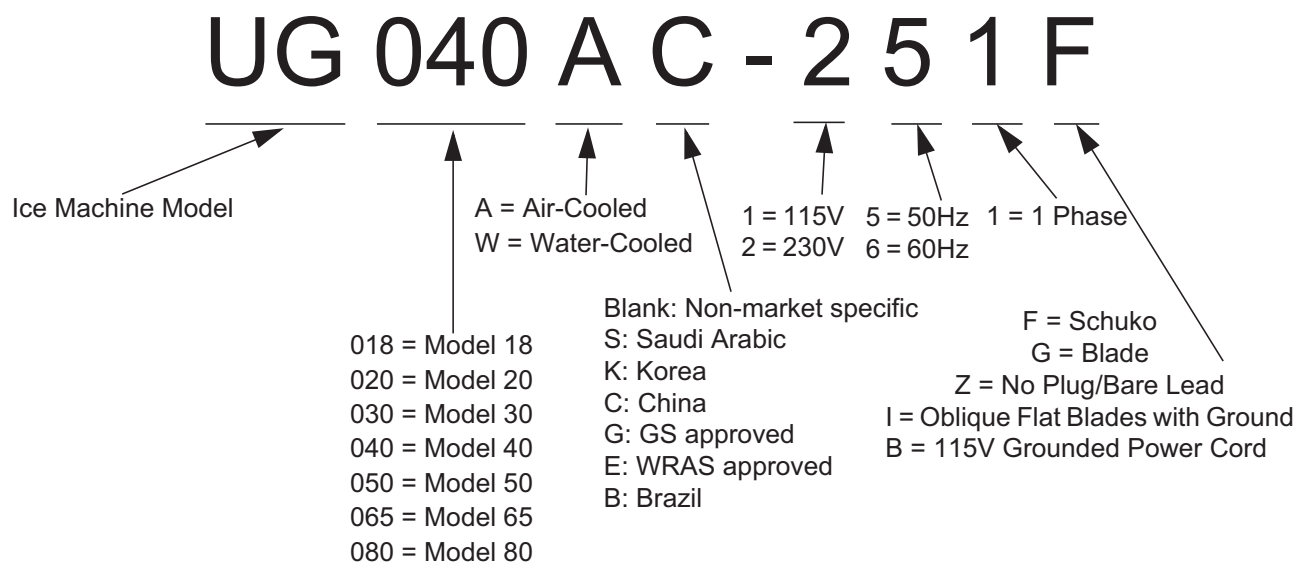

### Model/Serial Number Location

Record the model and serial number of your ice machine and bin or dispenser in the space provided below. These numbers are required when requesting information from your local Manitowoc distributor, or Manitowoc Ice, Inc.

The model and serial number are listed on the OWNER WARRANTY REGISTRATION CARD. They are also listed on the MODEL/SERIAL NUMBER DECAL affixed to the ice machine, remote condenser and storage bin.

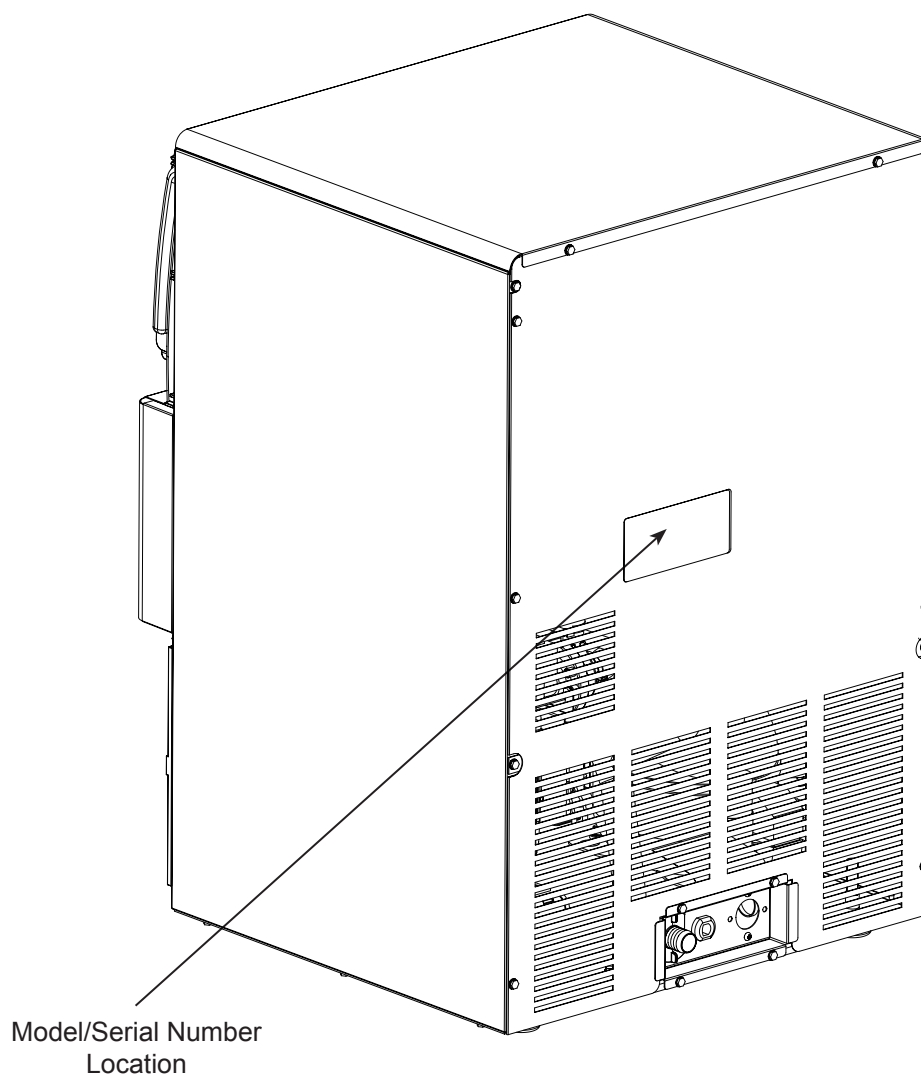

### Model/Serial Number Location

Model: \_\_\_\_\_

Serial Number: \_\_\_\_\_

## Owner Warranty Registration Card

### GENERAL

The packet containing this manual also includes warranty information. Warranty coverage begins the day your new ice machine is installed.

#### Important

Complete and mail the OWNER WARRANTY REGISTRATION CARD as soon as possible to validate the installation date.

If you do not return your OWNER WARRANTY REGISTRATION CARD, Manitowoc will use the date of sale to the Manitowoc Distributor as the first day of warranty coverage for your new ice machine.

### COMMERCIAL WARRANTY COVERAGE

#### General

The following Warranty outline is provided for your convenience. For a detailed explanation, read the warranty bond shipped with each product.

Contact your local Manitowoc representative or Manitowoc Ice, Inc. if you need further warranty information.

#### Parts

Manitowoc warrants the ice machine against defects in materials and workmanship, under normal use and service for two (2) years from the date of original installation.

#### Labor

Labor required to repair or replace defective components is covered for one (1) year from the date of original installation.

### Exclusions

The following items are not included in the ice machine's warranty coverage:

1. Normal maintenance, adjustments and cleaning as outlined in this manual.
2. Repairs due to unauthorized modifications to the ice machine or use of non-standard parts without prior written approval from Manitowoc Ice, Inc.
3. Damage caused by improper installation of the ice machine, electrical supply, water supply or drainage, or damage caused by floods, storms, or other acts of God.
4. Premium labor rates due to holidays, overtime, etc.; travel time; flat rate service call charges; mileage and miscellaneous tools and material charges not listed on the payment schedule. Additional labor charges resulting from the inaccessibility of equipment are also excluded.
5. Parts or assemblies subjected to misuse, abuse, neglect or accidents.
6. Damage or problems caused by installation, cleaning and/or maintenance procedures inconsistent with the technical instructions provided in this manual.

### Authorized Warranty Service

To comply with the provisions of the warranty, a refrigeration service company, qualified and authorized by your Manitowoc distributor, or a Contracted Service Representative must perform the warranty repair.

NOTE: If the dealer you purchased the ice machine from is not authorized to perform warranty service, contact your Manitowoc distributor or Manitowoc Ice, Inc. for the name of the nearest authorized service representative.

### Service Calls

Normal maintenance, adjustments and cleaning as outlined in this manual are not covered by the warranty. If you have followed the procedures listed in this manual, and the ice machine still does not perform properly, call your authorized service company.

THIS PAGE INTENTIONALLY LEFT BLANK

## Section 2


# Installation Instructions

---

### General

These instructions are provided to assist the qualified installer.

### Ice Machine Dimensions

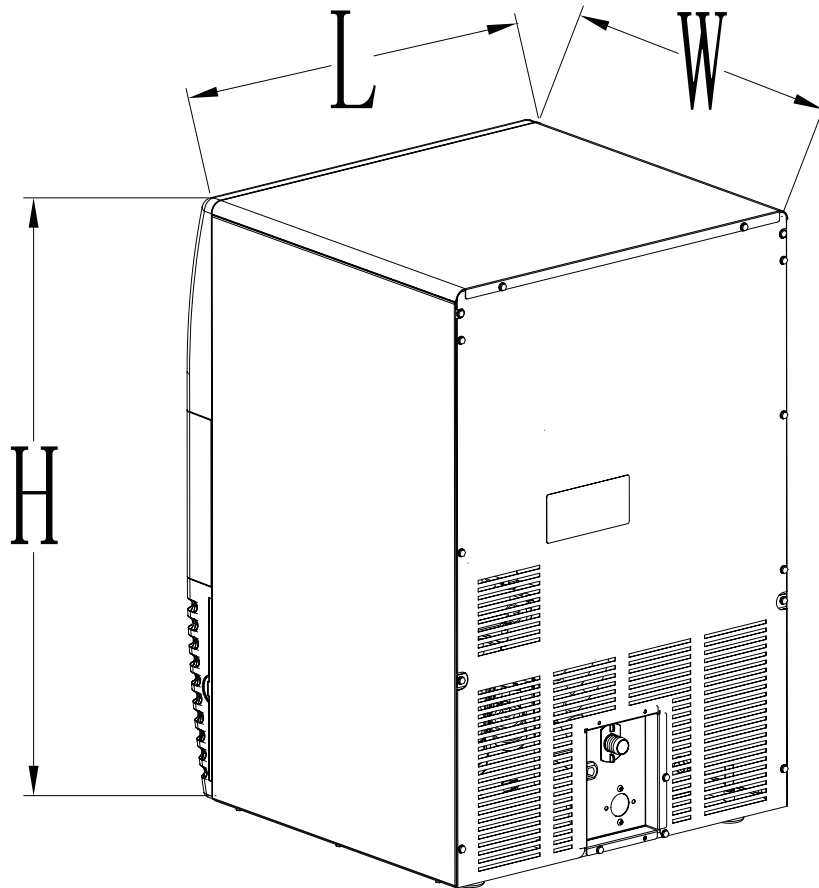

| Model |    | L   | W   | H   |
|-------|----|-----|-----|-----|
| UG018 | mm | 343 | 450 | 635 |
| UG020 | mm | 450 | 475 | 650 |
| UG030 | mm | 450 | 475 | 650 |
| UG040 | mm | 550 | 550 | 800 |
| UG050 | mm | 550 | 550 | 800 |
| UG065 | mm | 700 | 600 | 902 |
| UG080 | mm | 700 | 600 | 902 |

## Location of Ice Machine

The location selected for the ice machine must meet the following criteria. If any of these criteria are not met, select another location.

- The location must be indoors.
- The location must be free of airborne and other contaminants.
- The air temperature must be at least 10°C (50°F), but must not exceed 43°C (110°F).
- The location must not be near heat-generating equipment or in direct sunlight.
- The location must be capable of supporting the weight of the ice machine and a full bin of ice.
- The location must allow enough clearance for water, drain and electrical connections in the rear of the ice machine.
- The location must not obstruct airflow through or around the ice machine (condenser airflow is in and out the front). Refer to the chart below for clearance recommendations:

|           | Self-Contained<br>Air-Cooled | Self-Contained<br>Water-Cooled |
|-----------|------------------------------|--------------------------------|
| Top/Sides | 203 mm (8")*                 | 127 mm (5")*                   |
| Back      | 127 mm (5")                  | 127 mm (5")                    |

NOTE: The ice machine may be built into a cabinet.

\*There is no minimum clearance requirement for the top or left and right sides of the ice machine. The listed values are recommended for efficient operation and servicing only.

### Caution

The ice machine must be protected if it will be subjected to temperatures below 0°C (32°F). Failure caused by exposure to freezing temperatures is not covered by the warranty.

## Leveling the Ice Machine

Levelers are included with all ice machine. Legs are an available option.

1. Screw the legs or levelers into the bottom of the ice machine.
2. Screw the foot of each leg or leveler in as far as possible. Move the ice machine into its final position.
3. Level the ice machine correctly. Use a level on top of the ice machine. Turn each foot as necessary to level the ice machine from front to back and side to side.

## Electrical Service

### Warning

All wiring must conform to local, state and national codes. The ice machine must be grounded in accordance with national and local electrical codes.

### VOLTAGE

The maximum allowable voltage variation is  $\pm 6\%$  of the rated voltage on the ice machine model/serial number plate at start-up (when the electrical load is highest).

All ice machines are factory pre-wired with a 2 meter (6 ft) power cord. No plug is supplied.

### FUSE/CIRCUIT BREAKER

A separate fuse/circuit breaker must be provided for each ice machine. An electrical disconnect switch must be provided if the ice machine is hard-wired (wired without a plug).

### TOTAL CIRCUIT AMPACITY

The total circuit ampacity is used to help select the wire size of the electrical supply.

The wire size (or gauge) is also dependent upon location, materials used, length of run, etc., This must be determined by a qualified electrician.

### Warning

#### RISK OF ELECTRICAL SHOCK

FOR HARD-WIRED (WIRED WITHOUT A PLUG) MACHINE, IT MUST BE PROPERLY GROUNDED AND CONNECTED TO THE FIELD WIRING TERMINAL IN ACCORDANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN. BEFORE CONNECTING WIRES, DISCONNECT POWER AT THE ELECTRICAL DISCONNECT AND LOCK OUT TO PREVENT ACCIDENTALLY ENERGIZING. CONNECT ALL ELECTRICAL WIRING BEFORE USE - DO NOT ENERGIZE ICE MACHINE UNTIL INSTALLATION IS COMPLETE.

1. Connect the three supply lead wires (Blue, Brown, and Yellow/Green) to the field wiring terminal, "L", "N", and "G". The Yellow/Green wire must connect to the "G" (ground).
2. After connecting the wiring to the terminal strip, the supply lead must be secured to the cabinet with a strain relief near the terminal strip.
3. Verify wiring is contained in the electrical wiring box.

| Ice Machine | Voltage/Phase/<br>Cycle | Air-Cooled                       |            | Water-Cooled                     |            |
|-------------|-------------------------|----------------------------------|------------|----------------------------------|------------|
|             |                         | Maximum Fuse/<br>Circuit Breaker | Total Amps | Maximum Fuse/<br>Circuit Breaker | Total Amps |
| UG018       | 220/1/50                | 10                               | 2.0        | N/A                              | N/A        |
| UG020       | 220/1/50                | 10                               | 2.3        | N/A                              | N/A        |
|             | 220/1/60                | 10                               | 2.3        | N/A                              | N/A        |
| UG030       | 220/1/50                | 15                               | 2.8        | 15                               | 2.5        |
|             | 220/1/60                | 15                               | 2.8        | N/A                              | N/A        |
|             | 115/1/60                | 15                               | 5.5        | N/A                              | N/A        |
| UG040       | 220/1/50                | 15                               | 3.0        | N/A                              | N/A        |
|             | 220/1/60                | 15                               | 3.0        | N/A                              | N/A        |
| UG050       | 220/1/50                | 15                               | 4.0        | 15                               | 2.8        |
|             | 220/1/60                | 15                               | 4.0        | N/A                              | N/A        |
|             | 115/1/60                | 15                               | 6.8        | N/A                              | N/A        |
| UG065       | 220/1/50                | 15                               | 4.5        | N/A                              | N/A        |
|             | 220/1/60                | 15                               | 4.5        | N/A                              | N/A        |
| UG080       | 220/1/50                | 15                               | 5.5        | N/A                              | N/A        |
|             | 220/1/60                | 15                               | 5.5        | N/A                              | N/A        |

## Water Service/Drains

### WATER SUPPLY

Local water conditions may require treatment of the water to inhibit scale formation, filter sediment, remove chlorine, and improve taste and clarity.

#### Important

If you are installing a water filter system, make sure that you use a separate line for water-cooled condenser. Filter life will be greatly reduced if filtered water is used for a water-cooled condenser.

### WATER INLET LINES

Follow these guidelines to install water inlet lines:

- Do not connect the ice machine to a hot water supply. Be sure all hot water restrictors installed for other equipment are working. (Check valves on sink faucets, dishwashers, etc.)
- Water pressure to the machine should be between 1.4 and 5.5 bar (20 and 80 psi).

- If water pressure exceeds the maximum 5 bar recommended pressure, obtain a water pressure regulator from your Manitowoc distributor. Adjust pressure to 2.5 bar (37 psi).
- Install a water shut-off valve.
- Connect to a potable water supply only.

### DRAIN CONNECTIONS

Follow these guidelines when installing drain lines to prevent drain water from flowing back into the ice machine and storage bin:


- Drain lines must have a 3.8 cm drop of run for each meter (1.5 inch for 3 feet), and must not create traps.
- The floor drain must be large enough to accommodate drainage from all drains.
- Run separate bin and water-cooled condenser drain lines. Insulate them to prevent condensation by temperature.

### WATER SUPPLY AND DRAIN LINE SIZING/CONNECTIONS


|                           | Water Temperature                       | Water Pressure                                   | Ice Machine Fitting     | Tubing Size Up to Ice Machine Fitting |
|---------------------------|-----------------------------------------|--------------------------------------------------|-------------------------|---------------------------------------|
| *Ice Making Water Inlet   | 10°C (50°F) Min.<br>32.2°C (90°F) Max.  | 1.4 bar (20 psi) Min.<br>5.5 bar (80 psi) Max.   | 3/4" Male Pipe Thread   | 15 mm (1/2") Inside Diameter Minimum  |
| **Drain Connection Outlet | —                                       | —                                                | 7/8" Fitting Barbed     | 18 mm (3/4") Minimum Inside Diameter  |
| Condenser Water Inlet     | 0.6°C (33°F) Min.<br>32.2°C (90°F) Max. | 1.4 bar (20 psi) Min.<br>10.3 bar (150 psi) Max. | 3/8" Female Pipe Thread | 15 mm (1/2") Inside Diameter Minimum  |
| Condenser Water Outlet    | —                                       | —                                                | 1/2" Female Pipe Thread | 15 mm (1/2") Minimum Inside Diameter  |

\* Water inlet hose supplied with machine. 3/4" Female pipe thread/2 meters long.

\*\* Drain hose supplied with machine. 7/8" (22.2 mm) Hose/2 meters long.

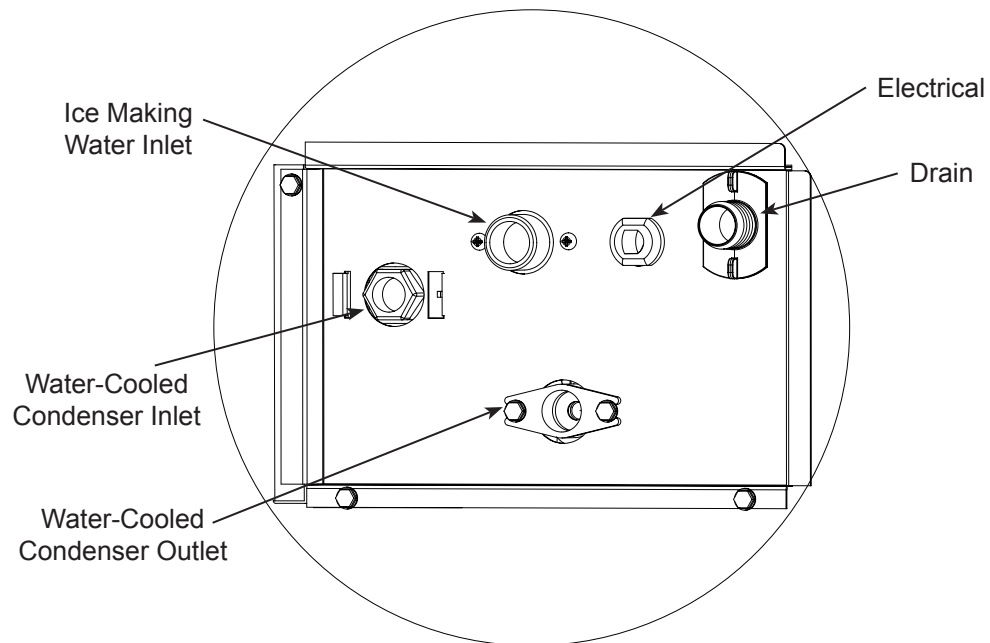

**Self-Contained  
Water-Cooled**

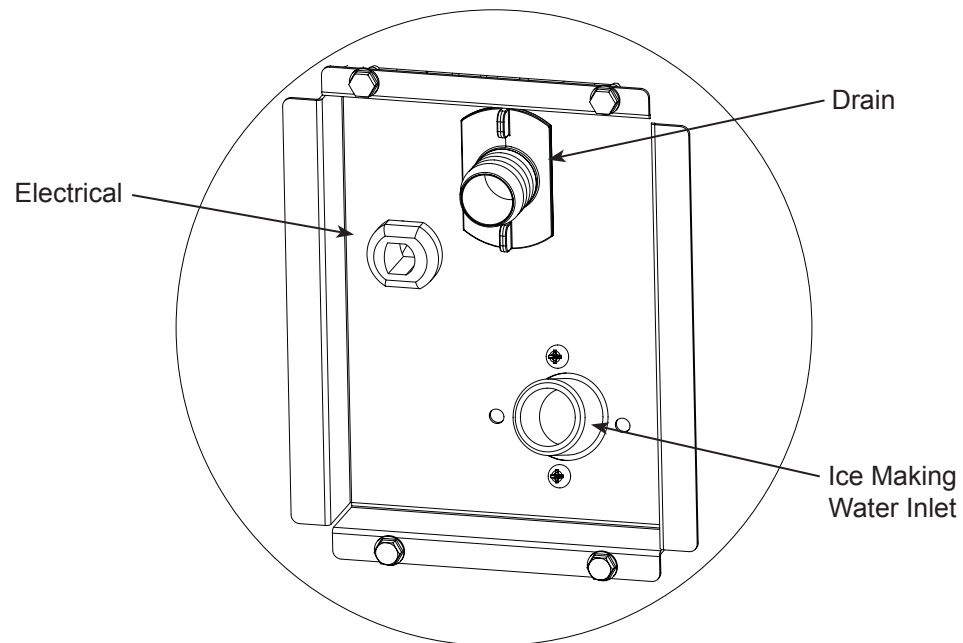

**Self-Contained  
Air-Cooled**

**WATER SUPPLY AND DRAIN LINE CONNECTIONS**

**Installation Checklist**

- ☐ Is the ice machine level?
- ☐ Have all of the internal packing been removed?
- ☐ Have all of the electrical and water connections been made?
- ☐ Has the supply voltage been tested and checked against the rating on the nameplate?
- ☐ Are all components installed?
- ☐ Has the ice machine been installed where ambient temperatures will remain in the range of 10 - 43°C (50 - 110°F)?
- ☐ Has the ice machine been installed where the incoming water temperature will remain in the range of 10 - 32.2°C (50 - 90°F)?
- ☐ Is there a separate drain line for the water-cooled condenser?
- ☐ Are all electrical leads free from contact with refrigeration lines and moving equipment?
- ☐ Has the owner/operator been instructed regarding maintenance and the use of Manitowoc Cleaner and Sanitizer?
- ☐ Has the owner/operator completed the warranty registration card?
- ☐ Has the ice machine and bin been sanitized?
- ☐ Has this manual been given to the owner/operator?
- ☐ Is the ON - OFF - WASH switch set to the ON position?

**Before Starting the Ice Machine**

All ice machines are factory-operated and adjusted before shipment. Normally, new installations do not require any adjustment.

To ensure proper operation, follow the Operational Checks in Section 3 of this manual. Starting the ice machine and completing the Operational Checks are the responsibilities of the owner/operator.


**Adjustments and maintenance procedures outlined in this manual are not covered by the warranty.**

** Warning****PERSONAL INJURY POTENTIAL**

Do not operate equipment that has been misused, abused, neglected, damaged, or altered/modified from that of original manufactured specifications.

## Section 3 Operation

### Component Identification

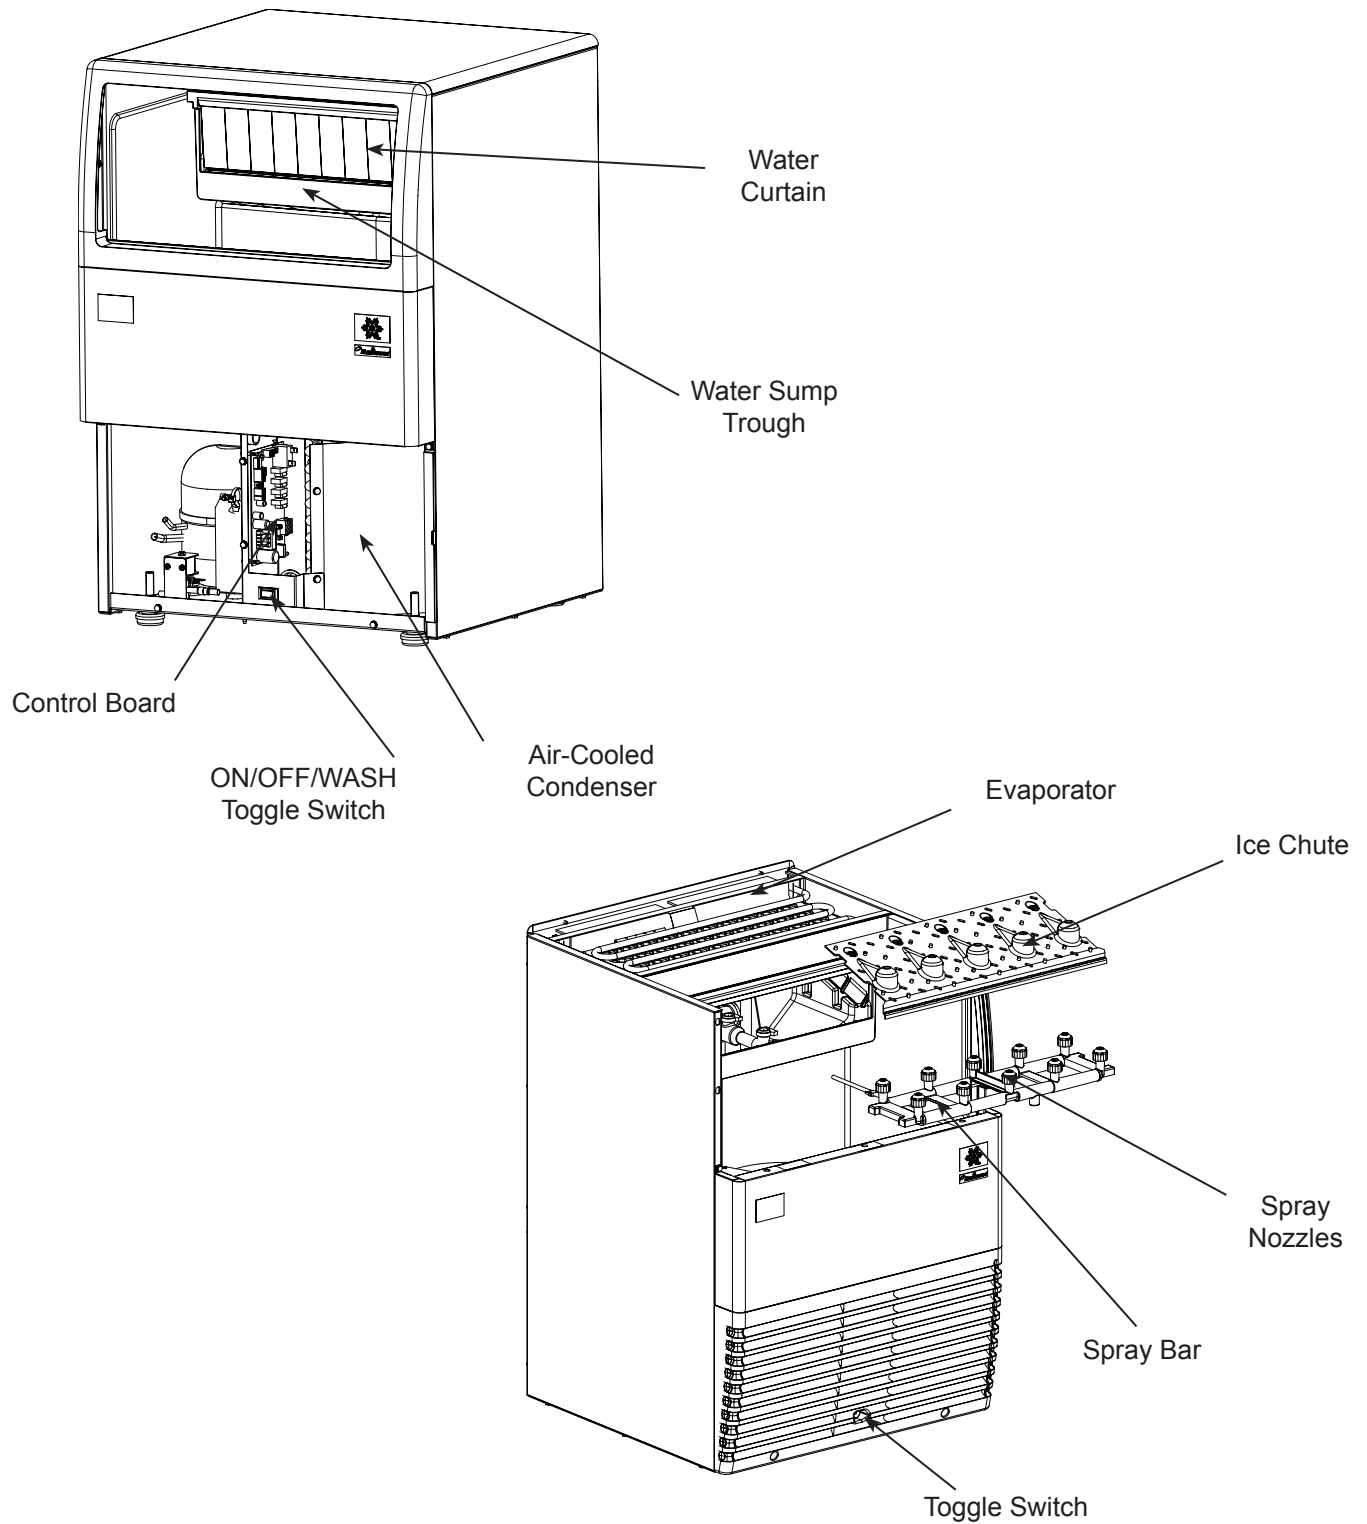


## Component Removal

### TOP COVER

For easiest access to the evaporator compartment, the top cover can be removed.

1. Remove two screws on the rear of the ice machine.
2. Slide top cover back to disengage the three pins from the front panel.

Remove two screws – slide cover back to remove.

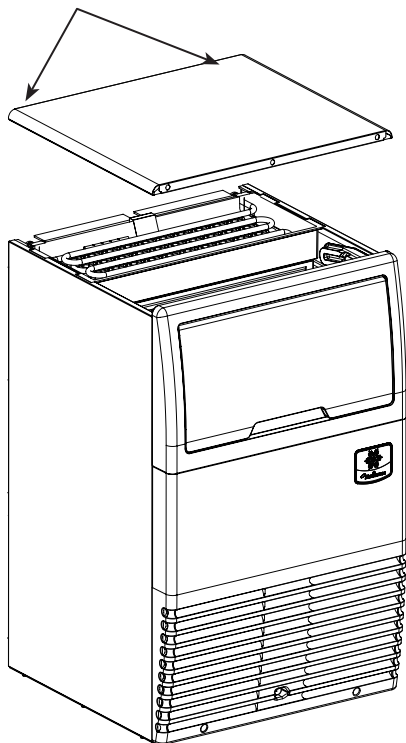


### BIN DOOR

Allows access to the storage bin.

1. Remove top cover.
2. Slide door up until rear pins align with slot in door tracks.
3. Lift rear door pins out and slide door up until front door pins align with slot.
4. Lift door out of door track.


Align door pins with track slots, then lift door out of track.

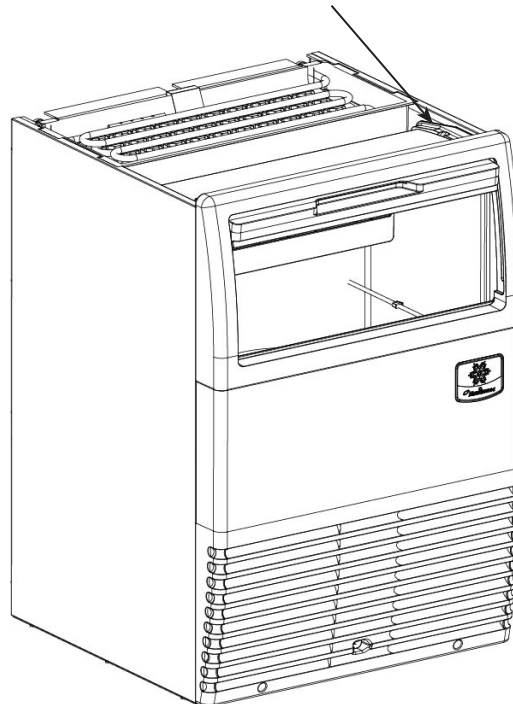

### WATER CURTAIN

The water curtain is designed to keep the spraying water from escaping the evaporator compartment. Removal of the bin door is not required, but enhances access.


1. Grasp the ice curtain and lift up.
2. To re-install into ice machine, pivot the water curtain and pull down into position. Make sure tabs are secure in grooves.

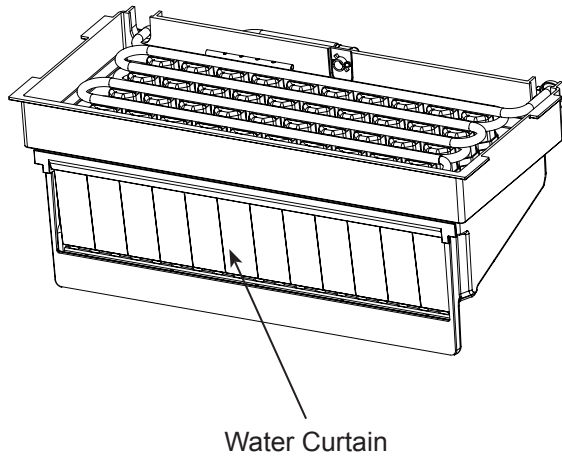

### ICE CHUTE

The ice chute is positioned over the spray nozzles and allows the ice to easily fall into the bin. It must be firmly positioned over the spray bar assembly, with the front edge inside the water trough or the spray nozzles will not be aligned with the spray holes, and spray water will fall into bin.

1. Grab protruding spray holes on one end and lift up.
2. Pivot ice chute and remove.
3. To re-install ice chute, grasp protruding spray holes and position over spray bar assembly. Make sure rear supports are over spray bar assembly, and front edge is inside of water trough.

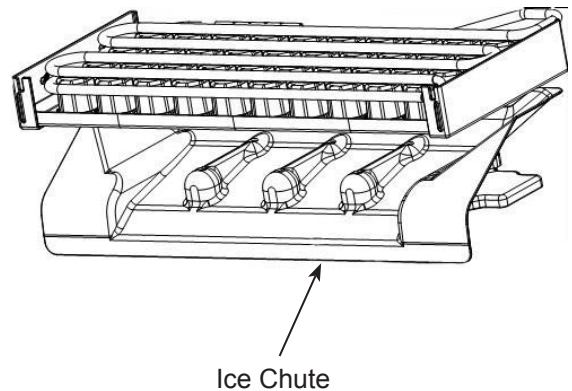


**SPRAY BAR**

The spray bar supplies water to the individual ice-making cups. Water from the water pump sprays through the nozzles, located on the upper portion of the tubes.


1. Grasp one end of the spray bar, lift up and remove from seat formed in water trough.
2. Remove both plastic clips on water inlet tubing by grasping both ears on clip and separating.
3. Apply food grade lubricant to ease re-assembly of spray bar components when necessary.
4. To re-install spray bar, position water inlet tubing on inlet ports, and squeeze clips until tight.
5. Reposition assembly on water trough seat.

Nozzles and inserts can be removed for cleaning by unscrewing nozzles. Inserts are located inside the spray bar ports. The spray bar also disassembles for easy cleaning.

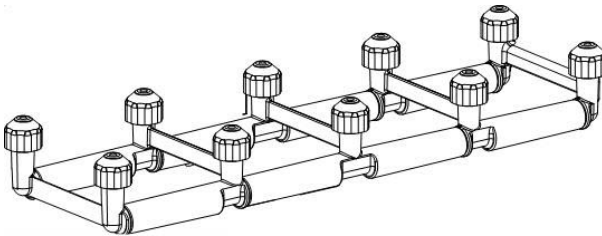**SUMP DRAIN OVERFLOW TUBE**

The sump drain overflow tube is located in the evaporator water sump.

1. Remove shutters and ice chute.
2. Lift spray bar or disconnect and remove for easiest access.
3. Pull up on overflow tube to remove.
4. To replace plug, insert in hole and push with force to make a tight seal.

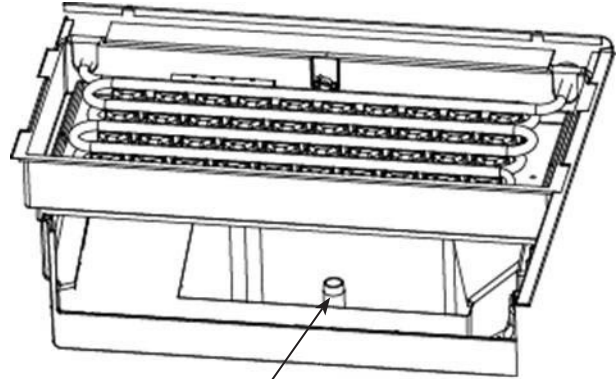

Overflow Tube

## Ice Making Sequence of Operation

### INITIAL START-UP

#### 1. Water Inlet and Pressure Equalization

Turn the toggle switch to “ON” position. The water fill valve and harvest valve are energized. 300 seconds later, the water fill valve is de-energized. 20 seconds after the harvest valve solenoid is energized, the compressor is energized. 300 seconds after the compressor is energized, the harvest valve solenoid is de-energized, the water pump and the fan motor are energized, and the machine goes into freeze cycle.

#### 2. Freeze Cycle

The pump sprays water into the inverted cups. The water freezes layer by layer, until an ice cube forms in each cup.

When the “water temperature” is equal to or less than 2°C for more than 5 seconds, the control will read the “liquid line temperature” and dip switch setting, and give the “freeze postpone time” and “fan shut-off time”. The board will shut off the fan before the end of the freeze cycle to assist harvest. When the freeze postpone time has elapsed, the harvest cycle is initiated.

#### 3. Harvest Cycle

The compressor continues to operate and the water pump is de-energized. The hot gas valve energizes, allowing hot gas to enter and warm the evaporator. The water valve is also energized, aiding with harvest, as well as filling up the sump with fresh water for a new freeze cycle.

At the point of 2 minutes to freeze end, the board will read the “liquid line temperature” again and calculate the “harvest time”.

The ice falls from the cups and is directed into the bin by the ice chute. The harvest cycle continues until the harvest time has elapsed, then machine goes into a new freeze cycle.

#### 4. Automatic Shut-Off

When the storage bin is full, the ice will come in contact with the bin thermostat which is located inside the bin. The machine will stop after approximately 45 seconds of continuous ice contact with the bin thermostat probe.

The ice machine remains off until a 3-minute delay has elapsed and enough ice has been removed from the storage bin to allow the ice to fall clear of the bin thermostat probe. As the ice clears the probe, the bin thermostat warms up and the machine starts another freeze cycle.

## Operational Checks

### GENERAL

Your ice machine was factory-operated and adjusted before shipment. Normally, a newly installed ice machine does not require any adjustment.

To ensure proper operation, always follow these Operational Checks when starting the ice machine:

- for the first time
- after a prolonged out-of-service period
- after cleaning and sanitizing

Routine adjustments and maintenance procedures outlined in this manual are not covered by the warranty.


#### Important

It is recommended that adjustments made to this ice machine be made by a qualified technician. Improper adjustment may seriously affect the life of this ice machine.

### ICE CUBE THICKNESS CHECK


The ice cube thickness is factory-set to maintain the ice cube thickness at the proper size and weight.

1. Allow the ice machine to operate for three complete cycles. The cubes should have a small dimple in the center.
2. Cycle times vary, according to surrounding air and water inlet temperatures.
3. If cubes are not full (large dimple), raise the DIP switch level to increase cube size. Allow ice machine to complete three cycles, then check cube.
4. If cubes are too full (no dimple), lower the DIP switch level to decrease cube size. Allow ice machine to operate three complete cycles.
5. The DIP switch can be adjusted to five levels: -2/-1/0/+1/+2. Ensure that only one level switch is pressed.

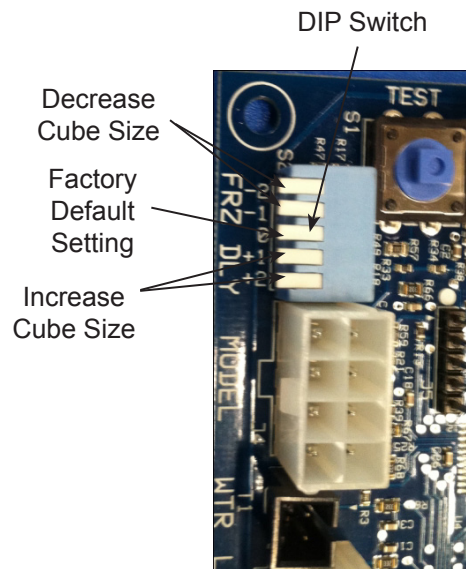

### CUBE SHAPE

The standard cube has an average weight of 19 grams. Notice the normal dimple in the center of the cube.

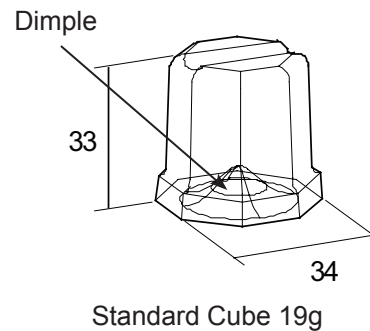

## Section 4

### Maintenance

#### General

The end user is responsible for maintaining the ice machine in accordance with the instructions in this manual. Maintenance procedures are not covered by the warranty.

 **Caution**

If you do not understand the procedures or the safety precautions that must be followed, call your local service representative to perform the necessary maintenance procedures for you.

Basic cleaning and maintenance of your ice machine will increase its reliability, increase performance, and help save on water and power consumption. Ice production will be maintained within the manufacturer's guidelines, and unwanted repairs due to maintenance issues will be minimized.

The chart below is an overview of the maintenance that the end user and service technician should perform, and the frequency. These figures are the minimum required. If the ice machine is supplied with hard water, more frequent evaporator cleaning should be performed. If the condenser air filter is totally blocked after one week, more frequent cleaning is recommended.

| Maintenance            | Weekly | Monthly | Semi Annual | Annual | After prolonged shutdown | At start-up |
|------------------------|--------|---------|-------------|--------|--------------------------|-------------|
| Clean Cabinet Exterior | X      |         |             |        | X                        | X           |
| Sanitize Ice Bin       |        |         | X           |        | X                        | X           |
| Clean Evaporator       |        |         | X           | S      | S                        |             |
| Sanitize Evaporator    |        |         | X           | S      | S                        | S           |
| Clean Condenser Coil   |        |         | X           | S      | S                        |             |
| Check Ice Quality      | X      |         |             | S      | S                        | S           |

X=End User

S=Service Company

## Cleaning the Condenser

### **Warning**

Disconnect electric power to the ice machine at the electric service switch before performing maintenance on equipment.

### AIR-COOLED CONDENSER

A dirty condenser restricts airflow, resulting in excessively high operating temperatures. This reduces ice production and shortens component life.

Clean the condenser at least every six months.

1. Remove plastic front grill by removing two Phillips head screws. Clean grill openings before replacing.
2. Clean the outside of the condenser with a soft brush or a vacuum with a brush attachment. Clean from top to bottom, not side to side. Be careful not to bend the condenser fins.
3. Shine a flashlight through the condenser to check for dirt between the fins. If dirt remains:
  - A. Blow compressed air through the condenser fins. Be careful not to bend the fan blades.
  - B. If dirt or grease remains between fins, consult your service representative.

### **Warning**

The condenser fins are sharp. Use care when cleaning them.

### WATER-COOLED CONDENSER AND WATER REGULATING VALVE

The water-cooled condenser and water-regulating valve may require cleaning due to scale buildup.

Low ice production, high water consumption and high operating temperatures and pressures all may be symptoms of restrictions in the condenser water circuit.

Because the cleaning procedures require special pumps and cleaning solutions, qualified maintenance or service personnel must perform them.

## Interior Cleaning and Sanitizing

### GENERAL

Clean and sanitize the ice machine every six months for efficient operation. If the ice machine requires more frequent cleaning and sanitizing, consult a qualified service company to test the water quality and recommend appropriate water treatment.

An extremely dirty ice machine must be taken apart for cleaning and sanitizing.

#### **Caution**

Use only approved Ice Machine Cleaner and Sanitizer. Read and understand all labels printed on bottles before use. Do not mix Ice Machine Cleaner and Sanitizer solutions together.

#### **Warning**

Wear rubber gloves and safety goggles (and/or face shield) when handling Ice Machine Cleaner or Sanitizer.

### CLEANING & SANITIZING PROCEDURE

Ice Machine Cleaner is used to remove lime scale or other mineral deposits. Sanitizer is used to remove algae or slime.

Mix 4 liters of water with 500 ml of cleaner in a plastic or stainless container.

| Cleaner        | Water       |
|----------------|-------------|
| 500 ml (16 oz) | 4 l (1 gal) |

**Step 1** Set the toggle switch to the OFF position at the end of a harvest cycle, after ice releases from the evaporator. Or, set the switch to the OFF position and allow the ice to melt off the evaporator.

#### **Caution**

Never use anything to force ice from the evaporator. Damage may result.

**Step 2** Remove all ice from the bin.

**Step 3** Remove all parts as described in Section 3, Component Identification & Component Removal.

**Step 4** Take all components to sink and, with 2 liters cleaner/water mixture, clean all components with a soft nylon brush. Disassemble spray bar, remove nozzles and inserts and soak for 5 minutes. For heavily scaled parts, soak in solution for 15-20 minutes. Rinse all components with clean water.

**Step 5** While components are soaking, use nylon brush to scrub inside of ice bin. Scrub inside of door, door track, bin, sump trough and evaporator moldings. With clean water, rinse all of these areas thoroughly.

**Step 6** Replace sump overflow tube and pour remaining 2 liters of mixture into the water sump. Replace all parts.

**Step 7** To start a standard cleaning cycle, press the toggle switch to WASH position and hold for 5 seconds.

**Step 8** Wait until the cleaning cycle is complete (approximately 13.5 minutes). Remove water curtain, ice chute and overflow tube from the water sump. Allow all water to drain from the sump. Replace drain plug. Press the toggle switch to WASH position and hold for 5 seconds to start a rinsing cycle.

**Step 9** Wait until the rinsing cycle is complete (approximately 12 minutes). Remove water curtain, ice chute, and water sump overflow tube. Drain water from sump and replace tube.

**Step 10** Mix 60 ml of sanitizer with 12 l of water in a plastic or stainless steel container.

| Sanitizer    | Water        |
|--------------|--------------|
| 60 ml (2 oz) | 12 l (3 gal) |

**Step 11** Remove water curtain and ice chute as described in Section 3, Component Identification & Component Removal.

**Step 12** Take all components to sink and, with 10 liters sanitizer/water mixture, sanitize all components with a soft nylon brush or cloth. Do not rinse components.

**Step 13** Use brush or cloth to sanitize the inside of ice bin. Scrub inside of door, door track, bin, water sump, water distribution assembly and evaporator moldings. Do not rinse.

**Step 14** Replace sump drain overflow tube and transfer remaining 2 liters of solution to the sump trough. Replace all components.

**Step 15** To start a standard sanitizing cycle, press the toggle switch to WASH position and hold for 5 seconds.

**Step 16** Wait until the cleaning cycle is complete (approximately 13.5 minutes). Remove water curtain and ice chute. Remove overflow tube from water sump and allow all water to drain from sump. Replace drain plug. Press the toggle switch to WASH position and hold for 5 seconds to start a rinsing cycle.

Step 17 Wait until the rinsing cycle (25.5 minutes) is complete, then place the toggle switch in the OFF position. Remove water curtain, ice chute, and water sump overflow tube. Drain water from sump and replace tube.

Step 18 Replace all parts.

Step 19 Place toggle switch to ON position. Ice machine will go into ice making cycle.

NOTE: To terminate a standard cleaning cycle, press the toggle switch to WASH position and hold more than 30 seconds.

 **Caution**

If the cleaner/sanitizer solution has been poured into the water trough, then the standard cleaning cycle must be completed. Don't terminate the cleaning cycle, or the ice machine will not purge the remaining cleaner/sanitizer solution from the water trough.

## Exterior Cleaning

Clean the area around the ice machine as often as necessary to maintain cleanliness and efficient operation.

Sponge any dust and dirt off the outside of the ice machine with mild soap and water. Wipe dry with a clean, soft cloth.

A commercial grade stainless steel cleaner and polish may be used.

## Removal from Service/Winterization

### GENERAL

Special precautions must be taken if the ice machine is to be removed from service for an extended period of time or exposed to ambient temperatures of 0°C (32°F) or below.

 **Caution**

If water is allowed to remain in the ice machine in freezing temperatures, severe damage to some components could result. Damage of this nature is not covered by the warranty.


Follow the applicable procedure below.

### AIR-COOLED ICE MACHINES

1. Disconnect the electric power at the circuit breaker or the electric service switch.
2. Turn off the water supply.
3. Drain the water from the water sump and water pump by disconnecting the water pump tubing.
4. Disconnect and drain the incoming ice-making water line and disconnect the tubing from the water inlet valve outlet. Allow water to drain.
5. Blow compressed air in the drain opening and water valve outlet hose, then reattach.
6. Make sure water is not trapped in any of the water or drain lines.

### WATER-COOLED ICE MACHINES

1. Perform steps 1-6 under "Air-Cooled Ice Machines."
2. Disconnect the incoming water and drain lines from the water-cooled condenser.
3. Insert a large screwdriver between the bottom spring coils of the water regulating valve. Pry upward to open the valve.
4. Hold the valve open and blow compressed air through the condenser until water no longer exits.

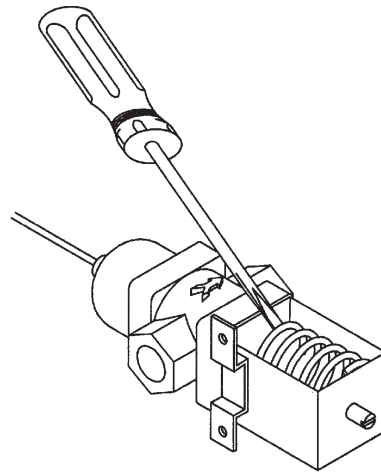

**Pry Open the Water Regulating Valve**

## Section 5

### Before Calling for Service

#### Checklist

If a problem arises during operation of your ice machine, follow the chart below before calling for service. Routine adjustments and maintenance procedures are not covered by the warranty.

| Problem                                 | Cause                                                  | Correction                                                                                        |
|-----------------------------------------|--------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| Ice machine will not run                | No power – breaker off, fuse blown, unplugged          | Restore power.                                                                                    |
|                                         | Toggle switch is not in ON position                    | Place toggle switch in ON position.                                                               |
|                                         | The storage bin is full                                | Remove enough ice from the bin and wait for 3-minute delay to expire.                             |
| Ice machine runs and no ice is produced | No water to ice machine                                | Correct water supply.                                                                             |
|                                         | Water sump overflow tube out of position               | Reposition/install overflow tube.                                                                 |
|                                         | Water sump thermistor or liquid line thermistor faulty | Replace the thermistor.                                                                           |
|                                         | Control board problem                                  | Call for service.                                                                                 |
| Freeze cycle long – low production      | Dirty condenser                                        | Clean condenser.                                                                                  |
|                                         | Water temperature too high                             | Connect to a cold water supply. Verify check valves in faucets and other equipment work properly. |
|                                         | Refrigeration problem                                  | Call for service.                                                                                 |
| Shallow, incomplete or white ice cubes  | Ice machine is dirty                                   | Clean and sanitize the ice machine.                                                               |
|                                         | Water pressure supply incorrect                        | Verify water pressure is correct.                                                                 |
|                                         | Air temperature around ice machine is too high         | Vent area or move ice machine.                                                                    |
|                                         | DIP switch incorrectly adjusted                        | Adjust DIP switch.                                                                                |
| Will not initiate a harvest cycle       | Liquid line thermistor faulty                          | Replace the thermistor.                                                                           |
|                                         | Control board problem                                  | Call for service.                                                                                 |
| Ice cubes do not release                | Ice machine is dirty                                   | Clean and sanitize the ice machine.                                                               |
|                                         | Low ambient around ice machine                         | Move ice machine to warmer area.                                                                  |
|                                         | DIP switch incorrectly adjusted (cubes too large)      | Adjust DIP switch.                                                                                |

THIS PAGE INTENTIONALLY LEFT BLANK





MANITOWOC (CHINA) FOODSERVICE CO., LTD.  
NO. 151 JIANYE ROAD, BINJIANG DISTRICT, HANGZHOU, CHINA 310052

---

800-545-5720

[WWW.WELBILT.CN](http://WWW.WELBILT.CN)