


Elcold Mobilux 12V Freezer

with tricycle



Mounting Guide

- 2 pcs. Flat bars
- 4 pcs. Fastening bows
- 8 pcs. 6 mm Discs
- 8 pcs. 6 mm screw nut
- 4 pcs. Absorbers
- 4 pcs. 8 mm Discs
- 4 pcs. 8 mm screw nut

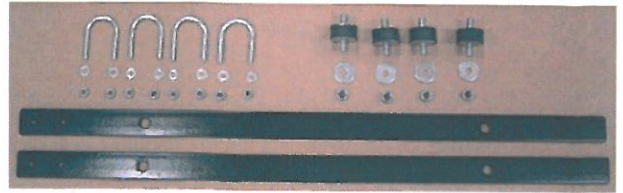


Contents of the package


You'll need a marker, a tape measure, two engineer's wrench; a 10mm and a 13mm to mount the freezer.

Draw a mark 165mm from the front edge of the frame.



and 605mm from the front edge of the frame.

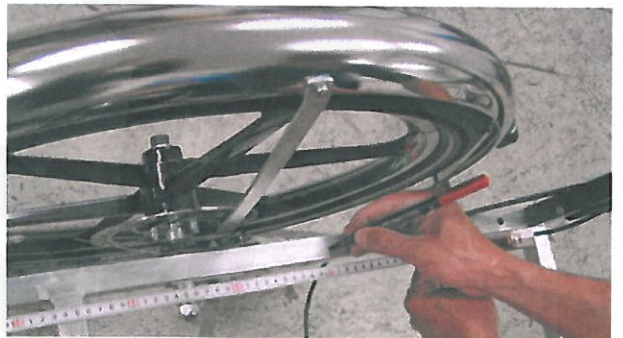

			Responsible: HM	Department: R&D	Recipient: Sales		
			Scale:	Tolerance:			
			Material:			Dimension: mm	
Date	Des	App	Text			Dwg.	Rev.
							04
							03
							02
200508	HM	HM	Nyoprettelse			MAV00006	01
Page: of:		Description:				No.:	
1	5	Mounting Guide Mobilux on Tricycle				#MAV00006	

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.

Place the two flat bars next to the marks.



Place the flat bars next to the marks as shown.



Mount the 4 Fastening bows, 6mm discs and 6mm screw nuts as shown.



			Responsible: HM	Department: R&D	Recipient: Sales		
			Scale:	Tolerance:			
			Material:			Dimension: mm	
Date	Des	App	Text			Dwg.	Rev.
							04
							03
							02
200508	HM	HM	Nyoprettelse			MAV00006	01
Page: of:		Description:				No.:	
2 5		Mounting Guide Mobilux on Tricycle				#MAV00006	

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.

Use the 10mm engineer's wrench to fasten the screw nuts.



The two mounted flat bars.



Mount the Absorbers below the freezer as shown.



			Responsible: HM	Department: R&D	Recipient: Sales	
			Scale:	Tolerance:		
			Material:		Dimension: mm	
Date	Des	App	Text		Dwg.	Rev.
						04
						03
						02
200508	HM	HM	Nyoprettelse		MAV00006	01
Page: 3	of: 5	Description: Mounting Guide Mobilux on Tricycle			No.: #MAV00006	

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.

Then freezer with the mounted Absorbers.




Place the freezer upon the tricycle as shown.




			Responsible: HM	Department: R&D	Recipient: Sales	
			Scale:	Tolerance:		
Date			Material:		Dimension: mm	
Des	App	Text			Dwg.	Rev.
						04
						03
						02
200508	HM	HM	Nyoprettelse		MAV00006	01
Page: 4 of 5		Description: Mounting Guide Mobilux on Tricycle			No.: #MAV00006	

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.

When placing the freezer upon the tricycle, the 4 Absorbers should fit into the 4 holes in the two flat bars.

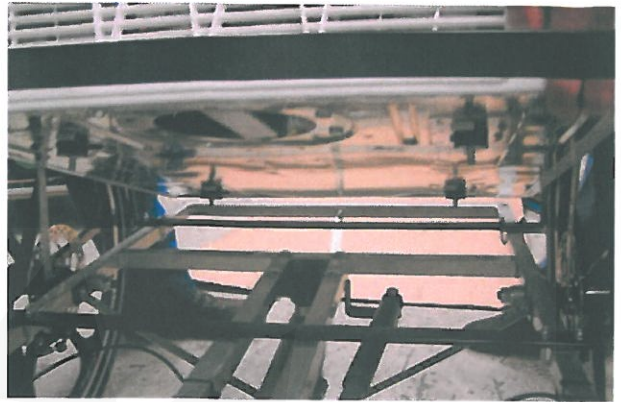

Mount the Absorbers with the 8mm Discs and the 8mm screw nuts. Use the 13mm engineer's wrench to fasten the screw nuts.

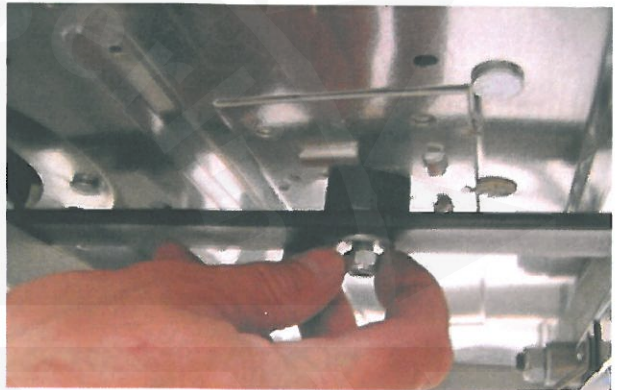

			Responsible: HM	Department: R&D	Recipient: Sales		
			Scale:	Tolerance:			
			Material:			Dimension: mm	
Date	Des	App	Text			Dwg.	Rev.
							04
							03
							02
200508	HM	HM	Nyoprettelse			MAV00006	01
Page: 5	of: 5	Description: Mounting Guide Mobilux on Tricycle				No.: #MAV00006	

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.